



WIRELESS OFFSET CENTERLINE CALIPER IP67

USER MANUAL










| Item No | Range | | Reso- lution | Accu- racy | Anvil D | | ion | it |
|-----------|--------|-----------|-----------------|---------------|----------|--------|-------------|--------|
| | | | | | standard | option | Protection | Preset |
| | mm | inch | mm | μm | mm | mm | | |
| 141730154 | 10-160 | 0.4-6.4" | | | | | | • |
| 141730204 | 10-210 | 0.4-8.4" | 0,01 | ±30 | 10 | 20, 35 | IP67 | • |
| 141730304 | 10-310 | 0.4-12.4" | | | | | | • |

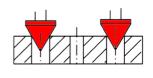

OPERATION INSTRUCTIONS

OFFSET CENTERLINE calipers equipped with special jaws for measuring center to center distance.

Wipe with a clean cloth, soaked in gasoline, measuring surface of the frame and gauge calipers to remove anti-corrosion oil. If necessary, open the battery cover; insert the battery (type CR2032) according to the polarity of the electrodes.

This caliper has Autoswitch on/ off function:

- move electronic module for switch on caliper
- after 10 minutes without any moving caliper will switch off During the measurement, measuring jaws should to sum to the measured object without knocking.

During the measurement avoid warps of measuring surfaces of the instrument. Measuring surface must be fully in contact with the measurement object



BATTERY REPLACEMENT




WARNING!

IN THE PROCESS OF WORKING WITH CALIPERS SHOULD BE AVOIDED: Scratches on the measuring surfaces;

Measuring the size of object in the process of machining; Shocks or dropping, avoid bending of rod or other surfaces.

BUTTON FUNCTIONS



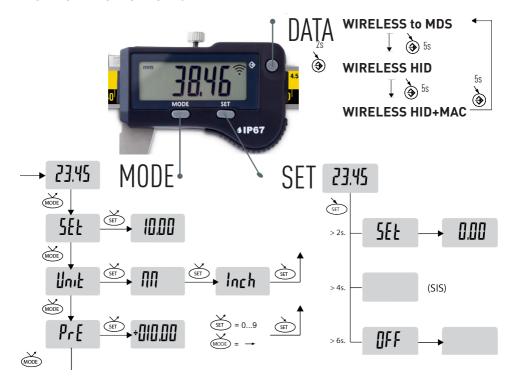

POWER CONSUMPTION

| MODE | | TRANSFER DATA |
|-------------------------|------------|---------------|
| WIRELESS OFF | | 45 μΑ |
| WIRELESS TO MDS | STANDARD | 2.0 mA |
| MIKETERS IN MINS | ECO (GATT) | 45-100 μA |
| WIRELESS HID | | 0.4 mÅ |
| WIRELESS HID+MAC | | 0.4 mA |



WIRELESS DATA TRANSFER MODES

MICROTECH caliper with Built-in Wireless data output module for transfer results

| MODE | | TRANSFER DATA | Switch ON Switch OFF | | Select MODE | | DATA send | |
|--------------------|------------|---|----------------------|---|--|----------------------|------------------------|--|
| | | | | | | indic. | | |
| WIRELESS TO MDS | STANDARD | MICROTECH MDS app Windows, Android, iOS, MacOS | ∂ 25. | | STANDARD or ECO in MDS app | blinking non stop | push, or on MDS app | |
| | ECO (GATT) | | all time active | | Loo III Pibo app | no | | |
| WIRELESS HID | | Direct to any customer app (like keyboard) | ∂ 2s | auto switch off when disconnect or no data 10 min | 5s. and connect BT on PC or Tablet | blinking | b push | |
| WIRELESS HID+MAC | | | | | | 2 sec | | |

WIRELESS DATA TRANSFER CONNECTION SWITCH ON WIRELESS module push button 2 sec;

In WIRELESS TO MDS non-stop blinking on display up to connection to MDS app and selecting STANDARD or ECO sub-mode. ECO recomended for battery economy In STANDARD submode data transfer 4 times/sec and all time on display. Push **a** button to save data to MDS app or use buttons and Timer inside app.

In ECO (GATT) submode caliper ready to transfer data any time with no indication. Push abutton to save data on MDS app.

For selecting next mode push 5 sec.

WIRELESS HID and WIRELESS HID+MAC blinking 2 sec on display and will be ready for searching on Tablet, Smartphone or Computer Bluetooth connections.

After successfull connection save data to customers app with push 太 button.

DOWNLOAD MICROTECH MDS APP

Link to to Download MICROTECH MDS app for Windows, Android, iOS, MAcOS on www.microtech.tools



VIDEO MANUAL

Video manual with Connection on MICROTECH YouTube https://www.youtube.com/@Microtech-Instrumentsor by QR code scanning

